

USER MANUAL

INSTALLATION, MAINTENANCE & STORAGE

INSTALLATION PROCEDURE



1

PLACE NUAXLE AGAINST THE WHEEL HUB

Use a jack to lift the vehicle and remove the tyre. Position the NuAxle stand firmly against the wheel hub.



2

SCREW IN WHEEL NUTS

Tighten the wheel nuts by hand to hold NuAxle stand in place, then use a wheel nut wrench or driver to fully tighten.



3

REMOVE THE JACK

Once the wheel nuts are tight, the vehicle is secure and stable. Slowly remove the jack.



4

VEHICLE SAFELY SUPPORTED

NuAxle stand remains firmly in place against the hub to safely support the vehicle.

REMOVAL PROCEDURE

1. Raise the vehicle using an approved jack.
2. Remove the wheel fittings.
3. Remove NuAxle from the hub.
4. Refit the wheel.
5. Lower the vehicle to the ground.

! REFER TO THE NUAXLE SAFETY & INSPECTION GUIDE BEFORE USE.

MAINTENANCE & STORAGE

1. Store in a clean, dry environment.
2. Inspect regularly for wear or damage in accordance with the NuAxle Safety and Inspection Guide
3. Always use in accordance with the manufacturers guidelines.
4. Touch up any damaged coating as required.
5. Never exceed the maximum load capacity.



PATENTED DESIGN
GB2622204

NuAxle™ Technical Datasheet | NUA-USM-001 | Rev 1.0

www.NuAxle.co.uk



MADE IN UK